

## Battery Charger

### Operating Instructions




\* 5 0 2 5 5 8 2 1 1 \*

5-025-582-11(1)

LBG-H1


## Parts and Controls

### Battery charger

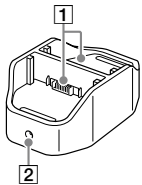

- 1 Battery terminal
- 2 Power port

### Included items

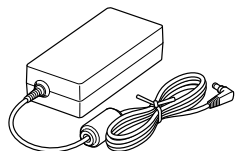

AC adapter



Power cord

## Safety Information

### WARNING

- A damaged power cord may cause a fire or electric shock. Observe the following cautions to avoid damaging the power cord.
  - Do not pinch the power cord between the unit and a table, wall, or other object.
  - Do not modify or damage the power cord.
  - Do not place heavy objects on the power cord or pull on the power cord.
  - Keep the power cord away from heaters and other heat sources.
  - When you disconnect the power cord, always hold it by the plug.
- Do not wrap the power cord around the AC adapter. This may cause the cord to break.
- Disconnect the AC adapter and power cord before moving the product. Otherwise, the AC adapter and power cord may be damaged, resulting in a fire or electric shock. Also, take care not to drop the product.
- For safety reasons, if the product is not to be used for long periods, unplug it from the wall outlet.
- Do not place or store the product in a location exposed to direct sunlight or close to a heater.
- Do not use or store the product where there is excessive oily smoke, steam, moisture, or dust. This may cause a fire or electric shock. Use or storage in an environment other than the operating conditions described in this manual may cause a fire or electric shock.
- Do not let water or foreign objects get inside the unit. This may cause a fire or electric shock. If water or foreign objects get inside the unit, remove the battery pack from the unit immediately, and disconnect the AC adapter and power cord.
- Do not disassemble the product. Disassembly or modification of the unit and the included AC adapter or power cord may cause a fire or electric shock.
- Use only the included AC adapter. Use of a different AC adapter may cause a fire, electric shock, or malfunction.
- Do not charge the battery pack if there is a possibility of lightning strike. A lightning strike may cause an electric shock. If lightning is likely, unplug the product from the wall outlet to prevent a fire, electric shock, or product failure. Also, if you hear thunder, refrain from touching the product.
- Use only the battery pack exclusively for this unit. Use of a different battery pack may cause a fire or electric shock.
- Do not operate the product or touch the power cord with wet hands. This may cause an electric shock.
- Use the included power cord. The included power cord is for use exclusively with this unit, and cannot be used with other products. Also, use only the included power cord with the unit. Use of a different power cord may generate heat, causing a fire or electric shock.

- Do not use the unit while it or the AC adapter is covered by a cloth or other object.
- Unplug the product from the wall outlet before cleaning it with a dry cloth.
- Firmly connect the connectors.
  - Do not insert metal objects into the connector ports. This may short-circuit the pins and cause a fire.
  - Insert the connectors straight into the ports. When inserting the connectors, do not apply excessive force to the ports.
- This product is designed for use only in the U.S.A.
  - Use with 120 V AC power.
  - Use with other voltages, such as in other countries or regions, may cause a fire or electric shock. Note that the AC adapter and power cord may support different input voltages. Be sure to check the descriptions of the AC adapter and power cord.

### CAUTION

- Do not subject the product to strong impacts. If you apply excessive force to the product, such as by putting a heavy object on top of it, dropping it, or stepping on it, this may cause an injury or product failure.
- Keep the product away from infants and young children.

## Compliance Information

Supplier's Declaration of Conformity  
 Trade Name: SONY  
 Model: LBG-H1  
 Responsible Party: Sony Electronics Inc.  
 Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.  
 Telephone Number: 858-942-2230

### Note:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## Notes on Use

- This product is designed for use only in the U.S.A. Operation is not guaranteed when used in other countries or regions.
- Do not connect the AC adapter to an electronic transformer (travel converter). This may cause heat generation or product failure.

### About charging

- Two battery packs can be inserted into the unit, but they cannot be charged at the same time. After one battery pack is fully charged, the other will start charging.
- It may take about 20 seconds to start charging. Wait until the battery level LEDs on the battery pack blink.
- If the battery temperature is too high or low, charging will not start due to the protection function. When the battery temperature enters the chargeable range in a room-temperature environment, charging will start automatically.
- If charging does not start indefinitely, remove the battery pack from the unit, unplug the AC adapter power cord from the wall outlet, and then reconnect it. If charging still does not start, refer to our support website for a solution.  
<https://www.sony.com/electronics/support>

### Caution when carrying the unit

When carrying the unit, take care not to drop it. If the unit is dropped, this may cause damage to the unit or injuries.