

USER NOTICE



Do not exceed the maximum specified load capacity (see specifications on the package label or visit www.mefoto.com).



Always ensure that Leg and Head Locks are tightly engaged before mounting any gear on your Tripod.



Do not use any Tripod below temperatures of -4°F or above $+158^{\circ}\text{F}$ (-20°C / $+70^{\circ}\text{C}$).



Always clean and dry any Tripod after it has been exposed to wet, dusty, sandy or salty conditions. Your Tripod is not recommended for use in salt water. If required, clean tripod using a mild soap solution applied with a soft cloth, rinse with fresh water and dry with soft towel. Remove any dust, dirt or sand from all Leg Locks, Leg Sections and all moving parts.



Do not leave any Tripod in the sun for prolonged periods and avoid high temperature exposure.



Avoid leaving any Tripod unattended in areas where people could trip over the gear and get hurt.



Remove camera, lens, and all gear from any Tripod when transporting.



For your safety, don't let your MeFOTO gear come in contact with any electrical power source.

LIMITED WARRANTY COVERAGE

Your MeFOTO product has been carefully manufactured, has passed many quality assurance checks and has been thoroughly tested before shipment. It is warranted in the country from which you purchased it based on the date of purchase to the original owner, against defects in materials and workmanship. Please contact your local MeFOTO dealer for further information and details about your Warranty. The Warranty does not apply to damages caused by mishandling, dropping, or leaking batteries, nor modification or servicing performed by others.

保修范围

 
您所使用的美孚产品是经过精密加工，多项严密质量检测，所有功能严格测试才完整包装出厂的。所有材料或者工艺方面的瑕疵，可以在您所购买的区域免费维修或者更换。详细的质量保修可以联系您所在地的经销商。所有人为原因所造成的产品损坏不在保修范围内，例如：错误操作，严重摔落，或者电池漏液体体损坏。

MeFOTO®

TRAVEL TRIPOD KITS

Operating Instructions



Thank you for making MeFOTO your choice for professional photographic equipment. Your MeFOTO gear is manufactured to provide years of dependable service. In order to obtain optimum satisfaction and performance, we suggest that you carefully read these instructions.

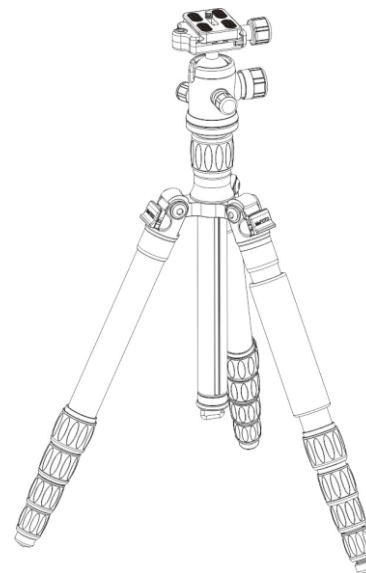

绚彩系列脚架套装 使用方法

感谢您选用美孚专业摄影器材，美孚产品提供值得您信赖的售后服务。为了让您对美孚产品的使用更加满意，我们建议您仔细阅读下面的使用说明。

  MeFOTO®

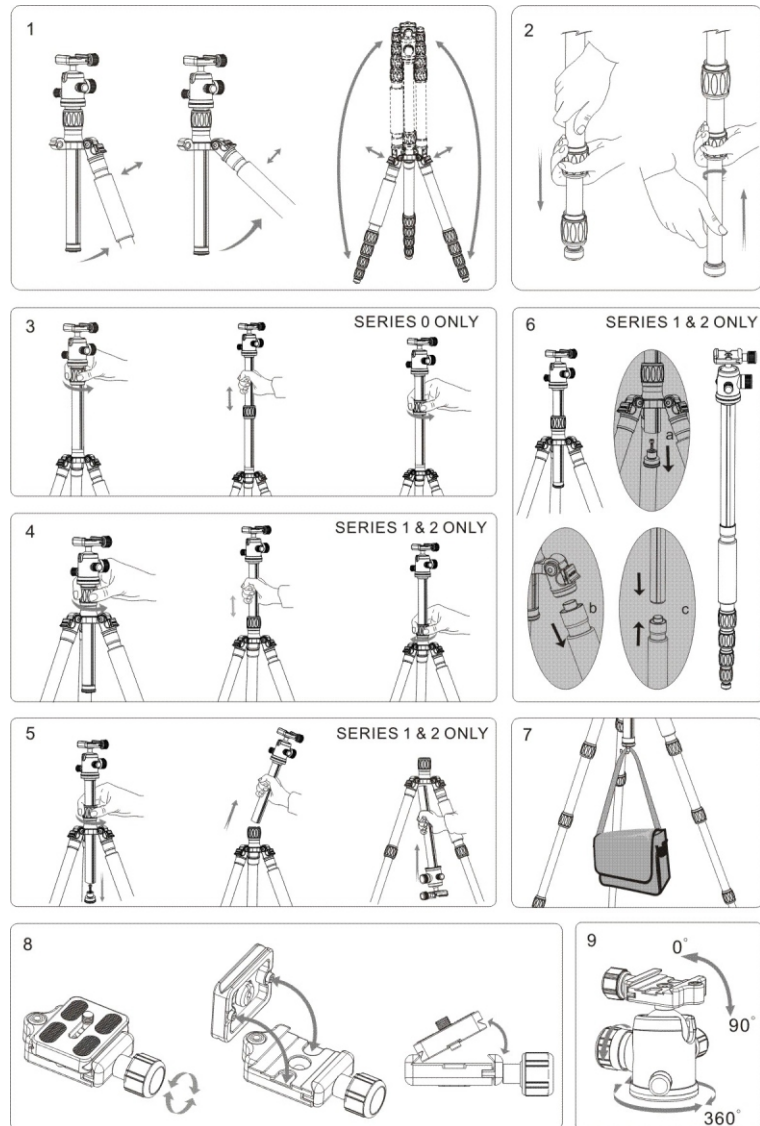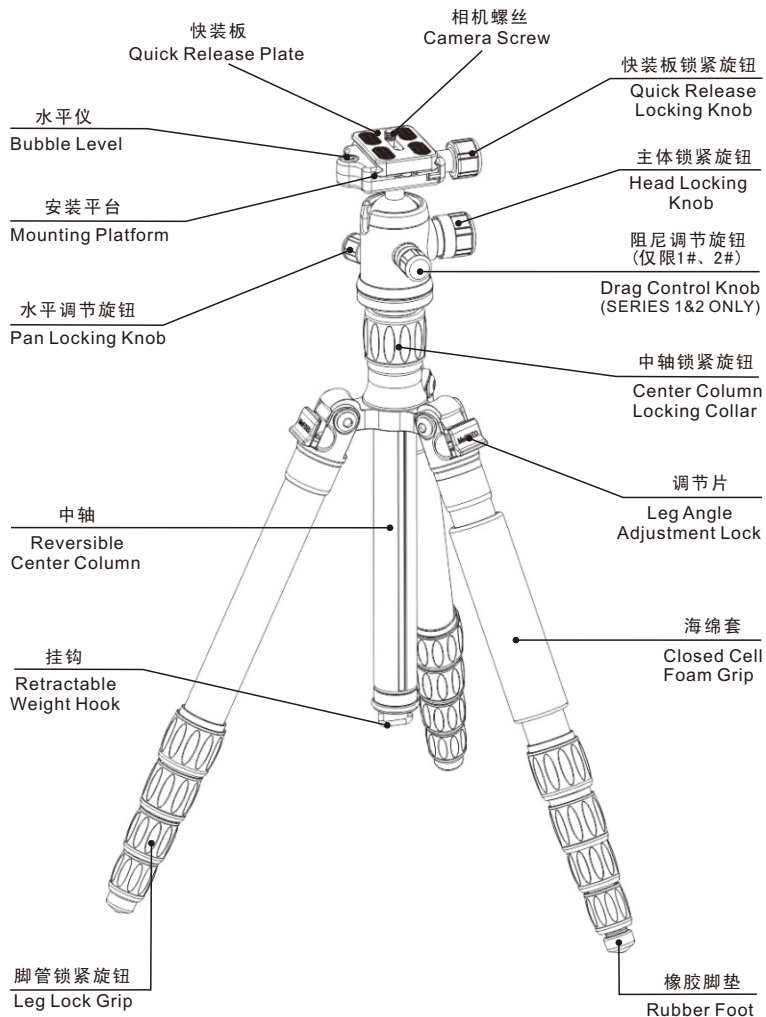

TRIPOD OPERATION

Before using your Tripod, adjust each Leg Section to the desired height and Leg Angle Setting. Make sure that the Tripod is firmly resting on a level surface and mount your camera securely on the Tripod Head. Always engage any safety locks on the Tripod Head to prevent any accidental dismounting.

FOR BEST RESULTS: Do not raise the Tripod higher than necessary and extend the largest diameter Leg Sections first. Only extend the Center Column if required to reach maximum height or to fine-tune the vertical position.

FOR EXTRA STABILITY: Carefully hang your camera bag or other weight on the Retractable Spring-Loaded Weight Hook at the bottom of the Center Column.

NOTE: Never carry your Tripod with camera gear attached.

Leg Angle Adjustment (FIGURE 1)

To accommodate uneven terrain, awkward shooting situations or for low angle shooting, your MeFoto Tripod includes a 2-position Leg Angle Adjustment Sliding Lock. Each Leg can be adjusted by pulling the Leg Angle Lock out and selecting one of the two positions. Please make sure that the Leg Angle Lock is securely pushed back into the lock position after you have selected the desired Leg Angle. After use, the Leg Angle Adjustment Sliding Lock releases the unique Tripod Legs so they can be folded up 180° making it extremely compact for easy carrying and packing.

Leg Section Adjustment (FIGURE 2)

Each Leg section can be adjusted to the desired length by turning the Leg Lock grip 1/2 turn (180°) clockwise until the Leg is free to slide in or out. Once the desired length is achieved, turn the Leg Lock Grip counter-clockwise until the Leg Section is securely locked. Repeat this step for each Leg until the Tripod is set to the desired height.

NOTE: To prevent any accidental damage to your gear, always remove any mounted equipment (camera, etc.) from the Tripod before adjusting the Leg Sections.

Raising and Lowering the Telescoping Center Column – Series 0 (FIGURE 3)

To raise or lower the Telescoping Center Column, turn the Center Column Locking Knob counter-clockwise and set the Column to the desired position. While holding the Column in position, turn the Center Column Locking Knob clockwise to secure the Column in place. Don't over-tighten the Center Column Lock, as this could damage the threads.

Raising and Lowering the Center Column-Series 1 & 2 (FIGURE 4)

To raise or lower the Center Column, turn the Center Column Locking Collar counter-clockwise and set the Column to the desired position. While holding the Column in position, turn the Center Column Locking Knob clockwise to secure the Column in place. Don't over-tighten the Center Column Lock, as this could damage the threads.

NOTE: Take special care when raising or lowering the Center Column, if a camera or equipment is mounted on the Tripod. Never loosen the Center Column Locking Knob without holding the Center Column. Failure to follow these instructions could result in damaged equipment.

Reversible Center Column-Series 1 & 2 (FIGURE 5)

Your Tripod has the ability to reverse the Center Column for close-up photography, copy work and for difficult to reach objects. To reverse the Center Column, unscrew the Retractable Weight Hook located on the bottom of the Center Column. Loosen the Center Column Locking Collar and pull the Center Column out. Insert the Center Column through the bottom with the Mounting Plate upside-down and retighten the Center Column Locking Collar securely.

NOTE: Do not reverse the Center Column when a camera or equipment is mounted.

Transfunctional Feature – Converting to a Monopod – Series 1 & 2 (FIGURE 6)

To assemble as a monopod first unscrew the Retractable Weight Hook and pull the Center Column (with Head) out. Unscrew the Single tripod leg (the one with the foam grip). Screw the entire Center Column (with Head) onto the top of the Single Leg.

Retractable Weight Hook (FIGURE 7)

To help stabilize the tripod during windy conditions, hang a camera bag, sandbag or other similar item from the retractable weight hook.

NOTE: Take care not to overload the tripod with extra weight as this could have a reverse effect on increasing the stability of the tripod.

HEAD OPERATION

The MeFoto Double-Action Ball heads feature three operating Knobs. Drag control is manually adjusted and locked, along with independent Panning. Plus a Universal Quick Release Clamp with secondary Safety Lock System is incorporated.

Universal Quick Release Plate System

The Double-Action Ball heads feature a Universal Quick Release Plate system. It offers a quick method of mounting or releasing a Camera or Equipment from the Head. It's important that the correct Quick Release Plate be used along with the proper mounting screw (1/4–20 is included as the standard size but spare 1/4–20 and 3/8 plates of various lengths are available as accessories). Extra Plates are recommended as you can screw one to each Camera or Lens for even greater convenience when rapidly mounting and dismounting gear. And because of compatibility with the Universal system, most plates and special brackets from other manufacturers can be used as well.

Quick Release Lock (FIGURE 8)

When used properly, the Quick Release Lock offers two levels of security for your gear. To remove the Quick Release Plate, turn the Quick Release Locking Knob counter-clockwise. A partial opening of the clamping mechanism allows the Quick Release Plate to slide on the Mounting Platform for proper balance and positioning. Two Stop Screws (removable) on the bottom of the Quick Release Plate provide this first level of security. An additional counterclockwise turn of the Quick Release Locking Knob opens the clamp fully so that the Quick Release Plate can be tilted out to be removed. Reverse the process and tighten the Quick Release Locking Knob to secure the Quick Release Plate.

Ballhead Controls (FIGURE 9)

A large Head Locking Knob locks the Ballhead in place. Once the Knob is turned counter-clockwise and loosened, the Ballhead can move freely allowing the Mounting Platform to be positioned anywhere within a 0–90° vertical orientation. This movement is expanded by the use of the Pan Locking Knob which adds a 360° Panning range. The Pan control is fully independent and positioning can be adjusted easily and accurately by using the Graduated Panning Scale and Pointer on the Base of the Ballhead. When the Head Locking Knob is released, it is possible to move the Ballhead with some resistance or Drag. To achieve the proper degree of Drag, mount the intended camera or equipment onto the Ballhead. While holding the camera/lens loosen the Head Locking Knob until it is released. Turn the Drag Control Knob clockwise to increase Drag, and counter-clockwise to decrease it.

FOR OPTIMUM RESULTS: Adjust the Drag under the weight capacity, temperature and conditions under which the Ballhead will be used.

NOTE: Do not over tighten any Locking Knobs as this could damage the Ball head locking mechanism.

操作步驟(簡體中文)

在使用三腳架前，把腳架的高度和角度調整到合適的位置，以確保三腳架能平穩地放置在一個水平面上，然後把相機固定在三腳架雲台上面，確保腳架和雲台完全鎖緊，防止照相機意外滑落。

三腳架角度調節：(如圖1所示)

為了適應凹凸地面或者低角度拍攝，美孚腳架外拔式角度調節片，更容易調節高低兩個角度。調整好角度後，請確保把角度調節片推到鎖緊的位置。使用完腳架後，拔出腳管角度調節片，美孚獨特的腳管可進行反向180°折疊，以便減少占用空間，利於攜帶。

三腳架高度調節：(如圖2所示)

順時針180°旋轉腳管鎖緊旋鈕，直到每節腳管都可以自由伸縮，調節三腳架的每支腳管到要求的長度，然後逆時針旋轉腳管鎖緊旋鈕，直到腳管完全鎖緊。重複以上操作，調節三腳架到您所需要的高度。

注意：在調節腳管時，務必取下相機等設備，避免意外損壞。

可伸縮二級中軸-僅限0#：(如圖3所示)

逆時針拧開中心管鎖緊旋鈕，拉伸中軸調到合適位置，然後順時針旋轉中心管鎖緊旋鈕鎖緊中軸，記住不要過度鎖緊中心管鎖緊旋鈕，這樣會毀壞螺紋。

注意：裝有相機等設備時，小心調節中軸，鬆開中心管鎖緊旋鈕時務必握緊中心管，請遵照說明書進行操作。

可伸縮中軸-僅限1#、2#：(如圖4所示)

逆時針拧開中軸鎖緊旋鈕，把中軸調到合適位置，然後順時針旋轉中軸鎖緊旋鈕鎖緊中軸，記住不要過度鎖緊中軸，這樣會毀壞螺紋。

中軸倒置-僅限1#、2#：(如圖5所示)

倒置中軸可以拍攝特寫鏡頭、复制圖片和拍攝難接近的物體。將掛鉤座組件拆開，拧鬆中軸鎖緊圈將中軸取出，將中軸倒置然後鎖緊，中軸有防轉槽，反轉安裝中軸時注意要將防轉槽對齊切口。**注意：**倒置中軸時，請務必卸下安裝在中軸上相機或其他器材。

三腳架轉換為獨腳架-僅限1#、2#：(如圖6所示)

- 將彈簧掛鉤從中軸旋出，拿出中軸；
 - 將帶海綿套的腳管從腳管接頭旋出；
 - 中軸雲台組件與腳管組件裝配；
- 完成三腳架到獨腳架的轉換。

可伸縮掛鉤(如圖7所示)

在刮風時，需要掛上重物增加三腳架的穩定性，可在掛鉤上掛上沙袋，照相機袋或類似的物品。**注意：**不要超重，否則反而會影響三腳架的穩定性。

雲台使用說明

美孚雙重保險球型雲台帶有兩個旋鈕，通過阻尼

進行調節與鎖緊，有獨立的水平調節功能，並且通用快裝夾帶有二代安全鎖緊裝置。

通用快裝板

帶有通用快裝板的双重保險球型雲台，可以快速取下相機以及攝影設備。快裝板上使用的是1/4-20的標準螺絲，且帶有3/8的相機螺絲便於使用不同長度的攝影配件，附帶的快裝板與其他快裝板兼容，並方便快速安裝與釋放相機和鏡頭。

快速鎖緊裝置：(如圖8所示)

快速鎖緊裝置提供攝影設備双重保險。取下快裝板，逆時針鬆開鎖緊旋鈕，快裝板可在快裝夾上滑動，進行平衡定位，快裝板上的兩顆可拆螺絲達到首要安全保險效果，逆時針鬆開旋鈕，即可取出快裝板，反之，即可鎖緊快裝板。

雲台操作：(如圖9所示)

逆時針鬆開大旋鈕，雲台可在垂直方向90度自由定位，位於雲台底座的水準調節旋鈕可進行360度水準調節。鬆開鎖緊旋鈕，可帶阻尼調節雲台。取下相機等攝影設備時，應握住攝影設備，再鬆開主體鎖緊旋鈕，順時針調節阻尼旋鈕增加阻尼，反之，則減少阻尼。

最佳狀態：在適當的承重範圍、溫度等條件下調節和使用雲台。

注意事項：



使用此產品時，請不要超過規定的最大承重(詳細參數請參考產品吊卡或者美孚官網。)



使用此產品時，為了避免意外損壞相機，在安裝相機之前，請務必確認產品的各個鎖緊系統處於安全狀態。



請勿在零下20度或高於零上70度的溫度下使用本產品。



在潮濕、泥沙、風塵等環境中使用過後，一定要用干布將螺絲擰牙，和可能藏有泥沙的部分清除乾淨，可使用無水酒精，消毒酒精，清潔劑等擦洗。不推薦在海水中使用本產品。



請勿長時間將產品放置在太陽下，避免長時間將產品放置在高溫下，例如靠近汽車玻璃數小時。



在公共場所使用本產品時，請勿離人，避免小孩靠近，造成意外傷害。在危險的地方使用時，請謹慎操作。



禁止搭載設備(相機)等一起攜帶移動。



為了人身安全，使用本產品時，請勿靠近高電壓區域，或與強效化學接觸。

操作步驟(繁體中文)

在使用三腳架前，把腳架的高度和角度調整到合適的位置，以確保三腳架能平穩地放置在一個水平面上，然後把相機固定在三腳架雲台上面，確保腳架和雲台完全鎖緊，防止照相機意外滑落。

三腳架角度調節：(如圖1所示)

為了適應凹凸地面或者低角度拍攝，美孚腳架外拔式角度調節片，更容易調節高低兩個角度。調整好角度後，請確保把角度調節片推到鎖緊的位置。使用完腳架後，拔出腳管角度調節片，美孚獨特的腳管可進行反向180°折疊，以便減少占用空間，利於攜帶。

三腳架高度調節：(如圖2所示)

順時針180°旋轉腳管鎖緊旋鈕，直到每節腳管都可以自由伸縮，調節三腳架的每支腳管到要求的長度，然後逆時針旋轉腳管鎖緊旋鈕，直到腳管完全鎖緊。重複以上操作，調節三腳架到您所需要的高度。

注意：在調節腳管時，務必取下相機等設備，避免意外損壞。

可伸縮二級中軸-僅限0#：(如圖3所示)

逆時針擰開中心管鎖緊旋鈕，拉伸中軸調到合適位置，然後順時針旋轉中心管鎖緊旋鈕鎖緊中軸，記住不要過度鎖緊中心管鎖緊旋鈕，這樣會毀壞螺紋。

注意：裝有相機等設備時，小心調節中軸，鬆開中心管鎖緊旋鈕時務必握緊中心管，請遵照說明書進行操作。

可伸縮中軸-僅限1#、2#：(如圖4所示)

逆時針擰開中軸鎖緊旋鈕，把中軸調到合適位置，然後順時針旋轉中軸鎖緊旋鈕鎖緊中軸，記住不要過度鎖緊中軸，這樣會毀壞螺紋。

中軸倒置-僅限1#、2#：(如圖5所示)

倒置中軸可以拍攝特寫鏡頭、复制圖片和拍攝難接近的物體。將掛鉤座組件拆開，擰鬆中軸鎖緊圈將中軸取出，將中軸倒置然後鎖緊，中軸有防轉槽，反轉安裝中軸時注意要將防轉槽對齊切口。**注意：**倒置中軸時，請務必卸下安裝在中軸上相機或其他器材。

三腳架轉換為獨腳架-僅限1#、2#：(如圖6所示)

- 將彈簧掛鉤從中軸旋出，拿出中軸；
 - 將帶海綿套的腳管從腳管接頭旋出；
 - 中軸雲台組件與腳管組件裝配；
- 完成三腳架到獨腳架的轉換。

可伸縮掛鉤(如圖7所示)

在刮風時，需要掛上重物增加三腳架的穩定性，可在掛鉤上掛上沙袋，照相機袋或類似的物品。**注意：**不要超重，否則反而會影響三腳架的穩定性。

雲台使用說明

美孚雙重保險球型雲台帶有兩個旋鈕，通過阻尼

進行調節與鎖緊，有獨立的水平調節功能，並且通用快裝夾帶有二代安全鎖緊裝置。

通用快裝板

帶有通用快裝板的双重保險球型雲台，可以快速取下相機以及攝影設備。快裝板上使用的是1/4-20的標準螺絲，且帶有3/8的相機螺絲便於使用不同長度的攝影配件，附帶的快裝板與其他快裝板兼容，並方便快速安裝與釋放相機和鏡頭。

快速鎖緊裝置：(如圖8所示)

快速鎖緊裝置提供攝影設備双重保險。取下快裝板，逆時針鬆開鎖緊旋鈕，快裝板可在快裝夾上滑動，進行平衡定位，快裝板上的兩顆可拆螺絲達到首要安全保險效果，逆時針鬆開旋鈕，即可取出快裝板，反之，即可鎖緊快裝板。

雲臺操作：(如圖9所示)

逆時針鬆開大旋鈕，雲臺可在垂直方向90度自由定位，位於雲臺底座的水準調節旋鈕可進行360度水準調節。鬆開鎖緊旋鈕，可帶阻尼調節雲臺。取下相機等攝影設備時，應握住攝影設備，再鬆開主體鎖緊旋鈕，順時針調節阻尼旋鈕增加阻尼，反之，則減少阻尼。

最佳狀態：在適當的承重範圍、溫度等條件下調節和使用雲臺。

注意事項：



使用此產品時，請不要超過規定的最大承重(詳細參數請參考產品吊卡或者美孚官網。)



使用此產品時，為了避免意外損壞相機，在安裝相機之前，請務必確認產品的各個鎖緊系統處於安全狀態。



請勿在零下20度或高於零上70度的溫度下使用本產品。



在潮濕、泥沙、風塵等環境中使用過後，一定要用干布將螺絲擰牙，和可能藏有泥沙的部分清除乾淨，可使用無水酒精，消毒酒精，清潔劑等擦洗。不推薦在海水中使用本產品。



請勿長時間將產品放置在太陽下，避免長時間將產品放置在高溫下，例如靠近汽車玻璃數小時。



在公共場所使用本產品時，請勿離人，避免小孩靠近，造成意外傷害。在危險的地方使用時，請謹慎操作。



禁止搭載設備(相機)等一起攜帶移動。



為了人身安全，使用本產品時，請勿靠近高電壓區域，或與強效化學接觸。