

VILTROX AF 75/1.2 XF Compatible List(AF/MF)

XH SERIES				XT SERIES			
CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION	CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION
X-H2S	AF-S	AF	AF-S	XT4	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	MF		MF	AF	Both AF&MF do not work
	AF-S	MF	MF and AF integration (MF: half-press the shutter)		AF-S	MF	MF
	AF-C	MF	MF and AF integration (MF: half-press the shutter)		AF-C	MF	MF
X-H1	AF-S	AF	AF-S	XT3	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
X-PRO3	AF-S	AF	AF-S	XT2	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF and AF integration (MF: half-press the shutter)		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
X-PRO2	AF-S	AF	AF-S	XT1	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
X-PRO1	AF-S	AF	AF-S	X-S10	AF-S	AF	AF-S
	AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
XT-xx SERIES				XE SERIES			
CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION	CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION
X-T30	AF-S	AF	AF-S	X-E4	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF and AF integration (MF: half-press the shutter)
	AF-C	MF	MF		AF-C	MF	MF (Camera focus mode is not adjustable)
X-T20	AF-S	AF	AF-S	X-E3	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
X-T10	AF-S	AF	AF-S	X-E2	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
X-T30II	AF-S	AF	AF-S	X-E2a	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF		AF-S	MF	MF
	AF-C	MF	MF		AF-C	MF	MF
XA SERIES				X-E1	AF-S	AF	AF-S
AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)	AF-C		AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)	
MF	AF	Both AF&MF do not work	MF		AF	Both AF&MF do not work	
AF-S	MF	MF (Camera focus mode is not adjustable)	AF-S		MF	MF and AF integration (MF: half-press the shutter)	
AF-C	MF	MF (Camera focus mode is not adjustable)	AF-C		MF	MF and AF integration (MF: half-press the shutter)	
XTXXX SERIES				XA00 SERIES			
CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION	CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION
X-A7	AF-S	AF	AF-S	X-T200	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
X-A5	AF-S	AF	AF-S	X-T100	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
X-A3	AF-S	AF	AF-S	X-A10	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
X-A2	AF-S	AF	AF-S	X-A20	AF-S	AF	AF-S
	AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)		AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
X-A1	AF-S	AF	AF-S	X-M1	AF-S	AF	AF-S
	AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)		AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)
X-M SERIES				X-M SERIES			
CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION	CAMERA MODEL	CAMERA SETTING	LENS SETTING	FUNCTION
X-M1	AF-S	AF	AF-S	X-M1	AF-S	AF	AF-S
	AF-C	AF	AF-C		AF-C	AF	AF-C (Half-pressing the shutter is AF-S, similar to pre-focus)
	MF	AF	Both AF&MF do not work		MF	AF	Both AF&MF do not work
	AF-S	MF	MF (Camera focus mode is not adjustable)		AF-S	MF	MF (Camera focus mode is not adjustable)
	AF-C	MF	MF (Camera focus mode is not adjustable)		AF-C	MF	MF (Camera focus mode is not adjustable)